

# SalonSERVE®



1000CC WAX HEATER  
WITH PROFESSIONAL HEATING SYSTEM

**Product code: W007**

**Careline: 01933 410022**

## INSTRUCTIONS FOR USE:

- ◆ Pour the wax required into the removable Inner container and cover with lid.
- ◆ Plug the wax heater into a power socket and press the ON/OFF switch to on.
- ◆ Select required heat level from heat 1-6 on the adjustable heat control. The red light on the left of the temperature control indicates the wax heater is on while the orange light on the right indicates the unit is heating. When the orange light turns off it indicates the selected temperature level has been reached. Setting 5-6 can be adopted for quick heating of wax but should be adjusted downwards to lower setting before treatment.
- ◆ After operation, turn the wax heater off.
- ◆ Recommendations: to avoid loss of profitable working time, we suggest that the heater is switched on approx 30 minutes before treatments are due to commence, to ensure that the product has reached the correct temperature and consistency.


## 1000CC WAX HEATER

WITH PROFESSIONAL HEATING SYSTEM

Ergonomic designed 1000cc Wax Heater. Easily fitted drip tray and removable inner wax pot makes cleaning quick and easy.

### Design features and functions:

- 1 Locking Lid
- 2 Easy fitted Drip Tray  
avoid splash of wax
- 3 On/Off Switch
- 4 Power Indicator Light
- 5 Temperature Control  
Switch to set variable  
temperature level
- 6 Heating Indicator Light
- 7 Removable Inner Wax  
Tank

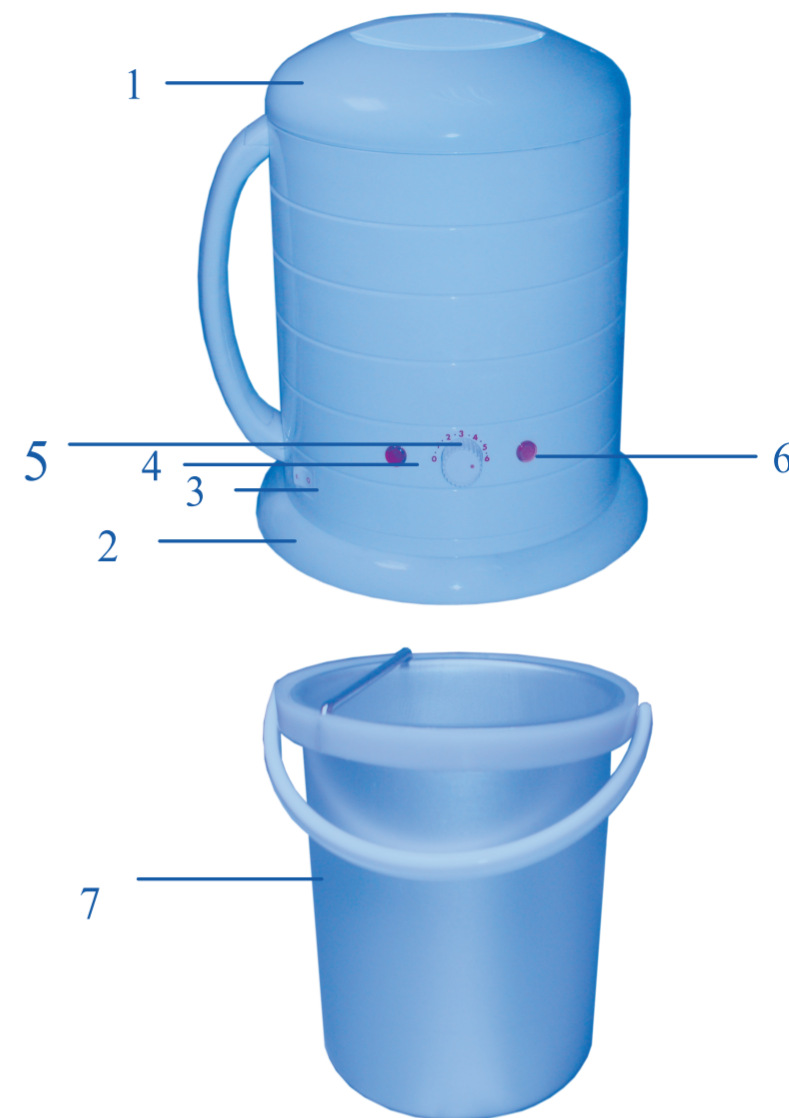

## Caution:

1. Keep away from children.
2. This appliance is intended to be used by trained professionals.

**Warning:** To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug immediately after using.
2. Always unplug the heater before cleaning and ensure that cleaning fluid is used sparingly.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped into water. Keep the cord away from heated surfaces.

5. The heater element is capable of producing a very high temperature. Therefore, never move the heater whilst the wax is hot.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch. Keep air openings free of lint and hair.
7. Do not switch the heater on when there is no wax (cartridge) in the unit.
8. Do not use outdoors or operate where aerosol (spray) products are being used.
9. Do not wrap the cord around the appliance. Do not twist the cord.

## Cleaning:

- The heater should only be cleaned with a recognised wax equipment cleaner, specifically formulated for the removal of wax; this will maintain the heater in optimum condition if used regularly.
- Never use Surgical spirit for cleaning, as this will erode the plastic casing of the heater and cause damage.
- Do not use other solvents as they could damage the heater and may produce toxic fumes when the heater is operated.
- Wax spilled onto the heater casing should be removed as soon as possible. If the wax is allowed to harden, removal is more difficult.
- It is especially important to keep the on/off switch and the temperature regulator control dial free of wax.