

SalohSERVE®

SEQ1014 MANUAL

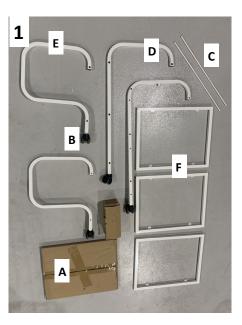


No.	Name	Quantity
Α	Glass Shelf	3
В	Wheel	4
С	Shelf Supporter Pole	3
D	Main Metal Frame	2 (L + R)
Е	Bottom Metal Frame	2 (L + R)
F	Glass Shelf Holder Frame	3
G	Screw 1 (M6 x 20)	13
Н	Screw 2 (M6 x 35)	5
I	PVC Supporter Plug	13
J	PVC Screw Cover	13

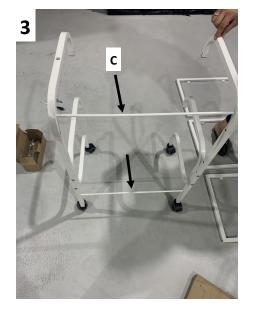

IMPORTANT: You may need help for the following steps as someone will need to hold the frame steady for you.

4. Stand both metal frames alongside each other.

5. Insert Shelf Supporter Poles (C) into the open holes (these will sit at the back of each shelf), whilst holding the frames steady.

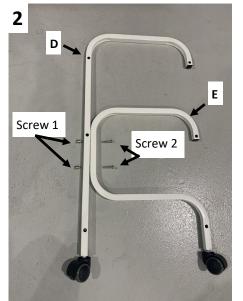


PLEASE NOTE: Do not attach Wheels until Step 9.

Lay the Main Metal Frame (D) and the Bottom
Metal Frame (E) as shown in the image.

2. Insert (shorter) Screw 1 (G) into the Main frame and screw in (longer) Screw 2 (H) through the Bottom frame and tighten using a screwdriver to secure.


3. Repeat Step 2 for the opposite side of the frame.

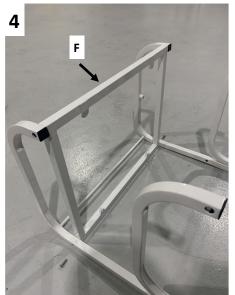

6. Line the Glass Shelf Holder Frame (F) up with the frame holes.

(You may find it easier to lay the trolley on it's back for the next steps).



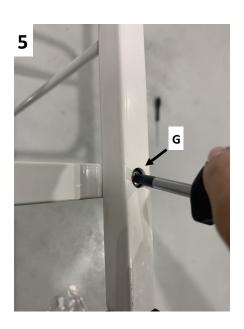

7. Carefully insert (shorter) Screw 1 (G) into the hole (as shown in the image) and through the other side of the frame.


IMPORTANT: Please make sure to line up the screw completely through to the other side of the frame hole using a screwdriver to prevent the screw falling through the frame.

8. Repeat for all 4 holes, for all 3 shelves.




11. Carefully place Glass Shelves (A) onto each shelf section.

IMPORTANT: Please take extra care when handling Glass Shelves.

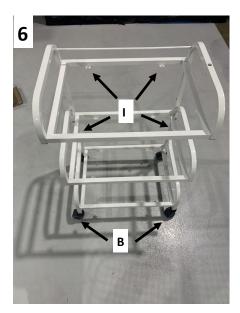

9. Secure all screws and insert all 4 Wheels(B).

10. Stand the trolley upright. Insert PVC Supporter Plugs (I) into the shelf slots as shown in the image (these are needed to support the glass shelves).

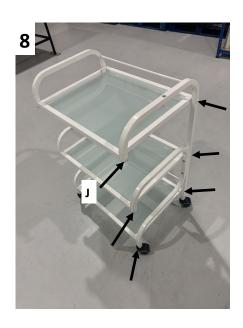

12. Finally, insert PVC Screw Covers (J) to cover all exposed screws.

Your trolley is now ready to use.

HELPLINE: 01933 410022

www.salonserve.com